


NOVA LUCE


9620152

1

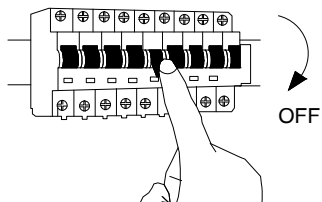


Turn off the general switch

2

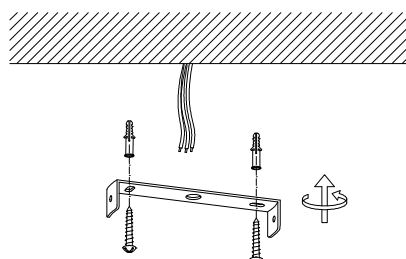


Drill holes
& apply plastic anchors with screws

3

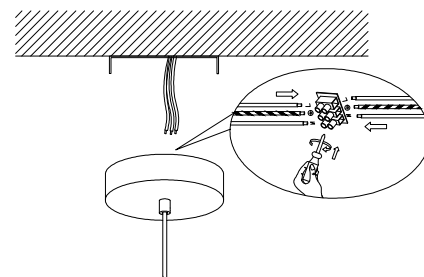


Connect the wires

4

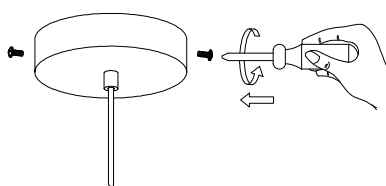

Tie up side screws
to make it stable

5

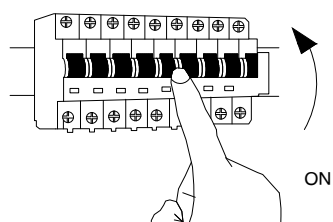

Turn on the general switch

