



# NOVA LUCE


9501238

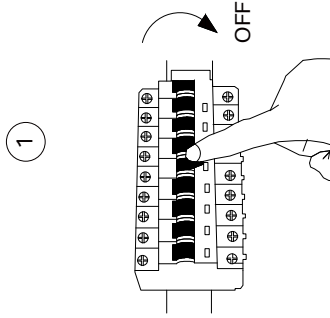


Turn off the general switch

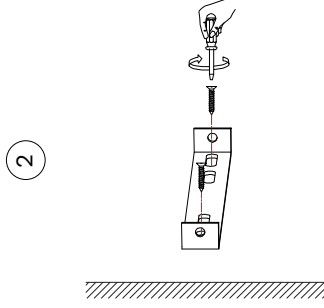


Drill holes apply screws  
& Plastic anchors

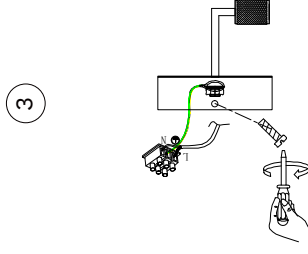


Connect the wires

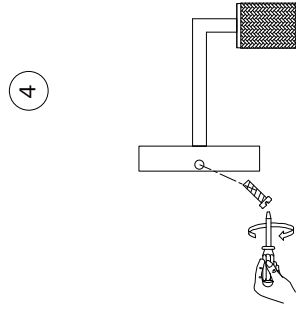

Apply the side screws

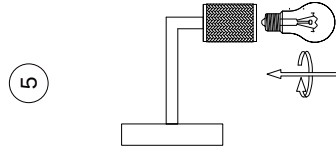

Insert the bulb

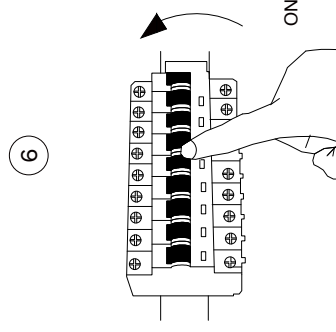

Turn on the general switch

