


# NOVA LUCE


9540208

1

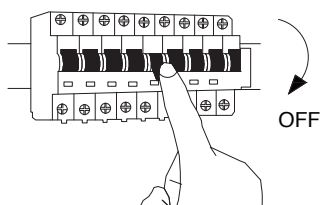


Turn off the general switch

2

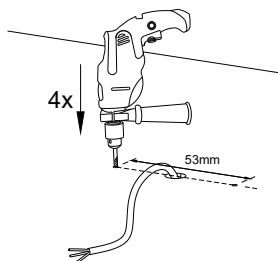


Drill holes

3

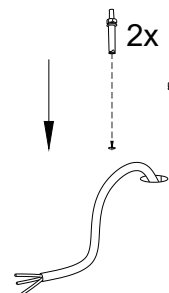


Apply screws

4

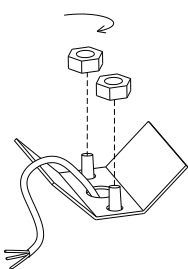


Apply the nut screw

5

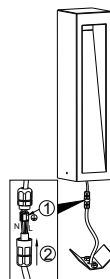


Connect the wires

6

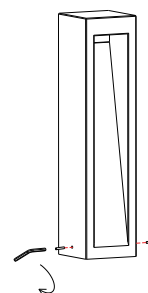

Apply the side screws

7

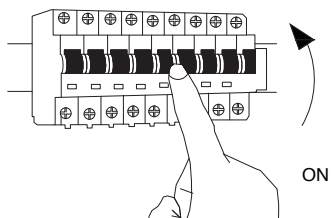

Turn on the general switch

