


# NOVA LUCE


9046500

1

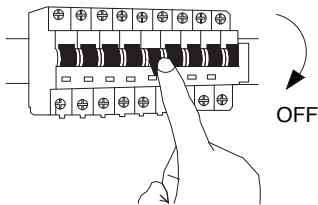


Turn off the general switch

2

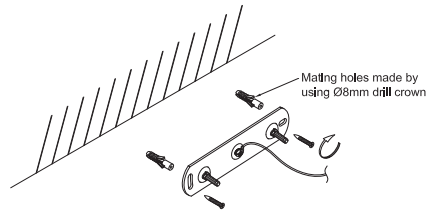


Drill holes & apply plastic anchors  
With screws

3

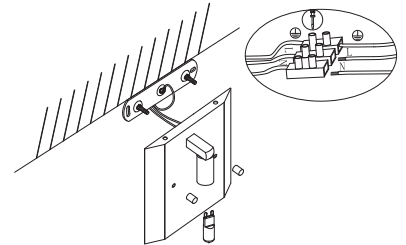


Connect the wires

4

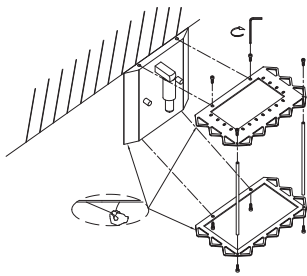


Apply the nuts in to place

5

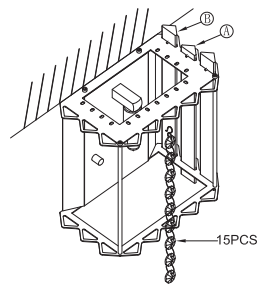


Apply the pcs

6

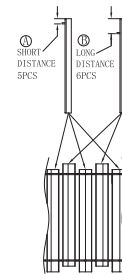

Apply the pcs depending  
On the distance

7

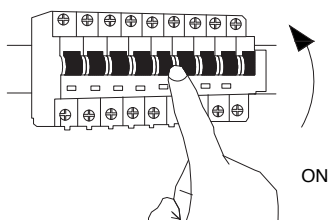

Turn on the general switch

