


NOVA LUCE


726405, 726406

1

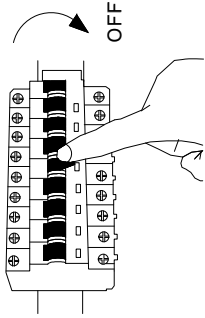


Turn off the general switch

2

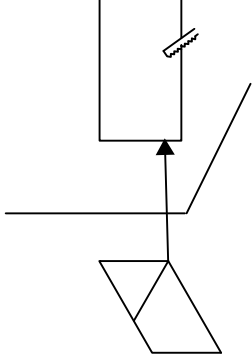


Create a Cutout

3

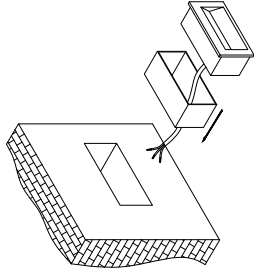


Make sure it fits well

4

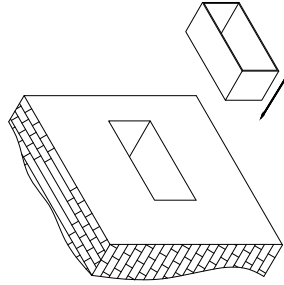


Insert the extra part

5

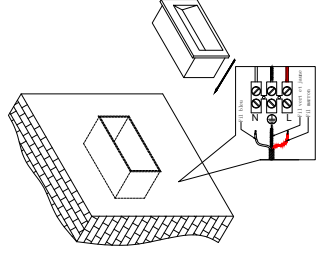

Connect the wires
& Apply the product

6

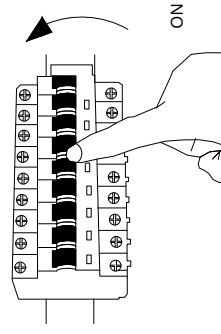

Turn on the general switch

