


# NOVA LUCE


9083011,9083021

1

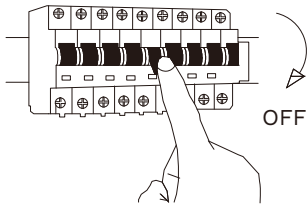


Turn off the general switch

2

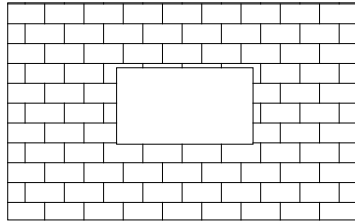


Cut hole in the wall(BOX504)

3

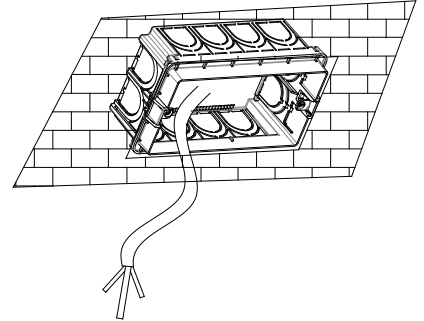


Embed the embedded box(504)

4

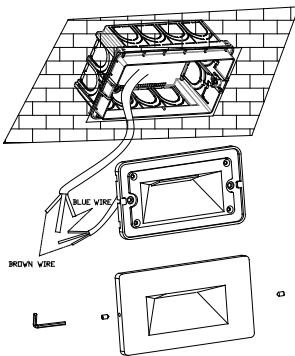


Untight the side screws  
Connect the wires

5

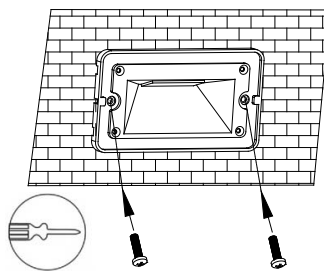


Apply the screws

6

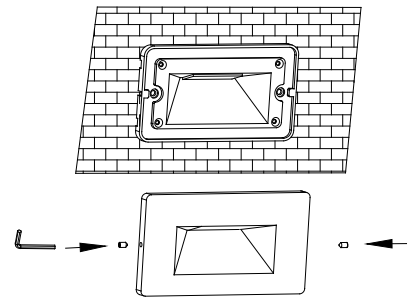

Tight the side screws

7

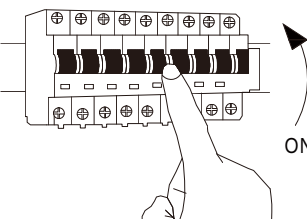

Turn on the general switch

