


# NOVA LUCE


9236372

1

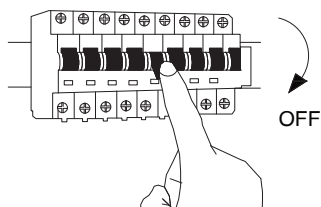


Turn off the general switch

2

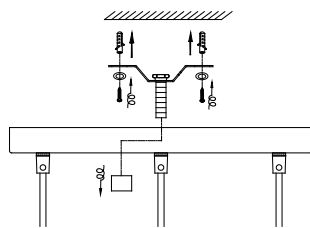


Untight the top cap  
Drill holes & apply plastic anchors  
Tie up screws

3

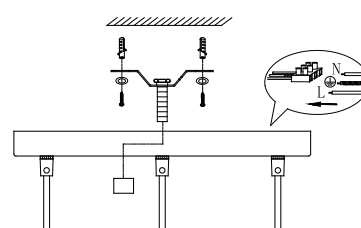


Connect the wires

4

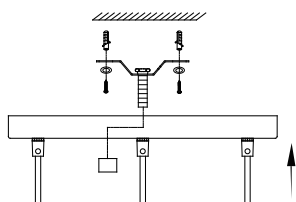


Put the canopy in place

5

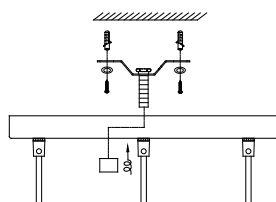


Tight up the top screw

6

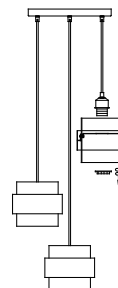


By rotating untight the sockets

7

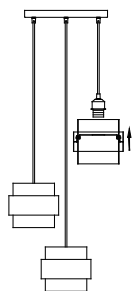


Carefully apply the acrylics

8

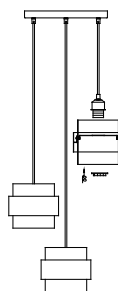


Put the sockets in place

9

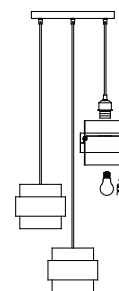

Apply the bulbs by rotate

10

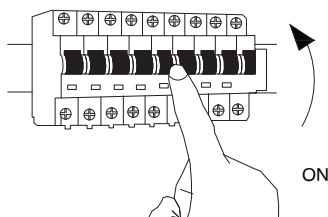

Turn on the general switch

