



NOVA LUCE

9580636 9580637 9580638




1

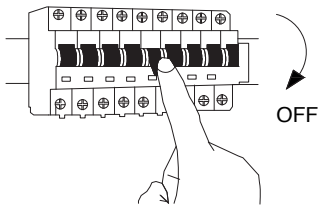


Turn off the general switch

2

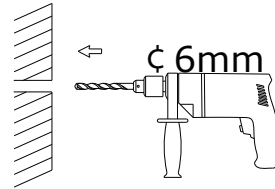


Drill holes

3

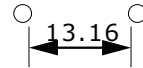


Map

4

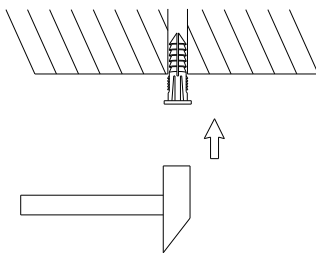


Apply plastic anchors

5

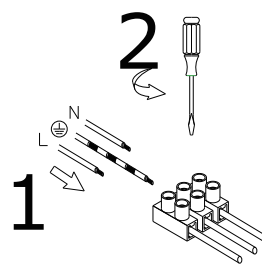


Connect wires

6

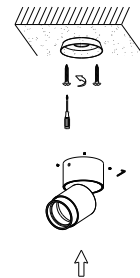

Apply screws with the product & the side nuts

7

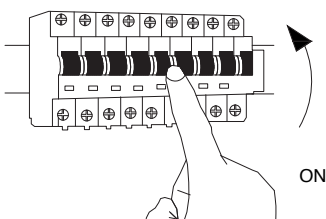

Turn on the general switch

