


NOVA LUCE


727001, 727002

1

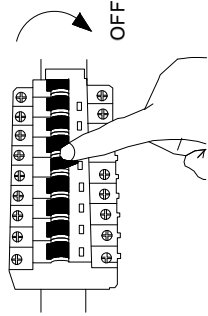


Turn off the general switch

2

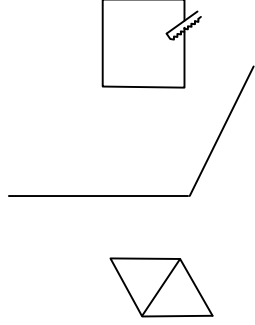


Create a CutOut

3

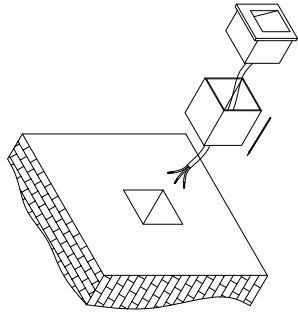


Apply a sealer
To insert the box into the hole

4

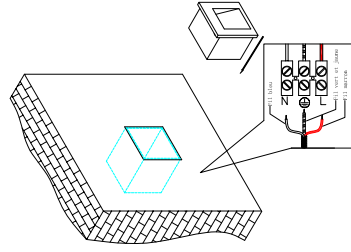

Connect wires
& Insert the luminaire
Into the stable box

5

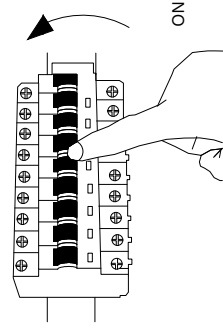

Turn on the general switch

6

