


# NOVA LUCE


9019218

1

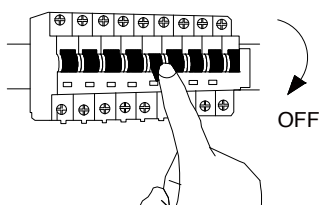


Turn off the general switch

2

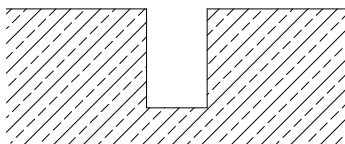


Dig a small hole at the outlet that is slightly larger than the product

3

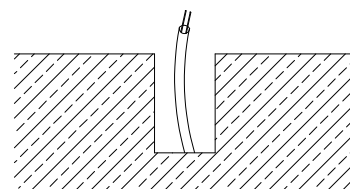


Pass the wire through

4

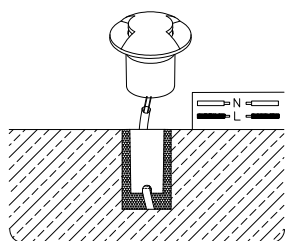

Connect the wires

5

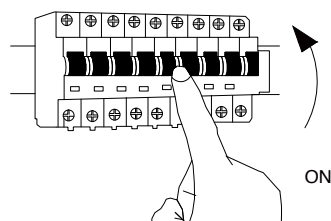

Turn on the general switch

