


# NOVA LUCE


9530150 9530160

1

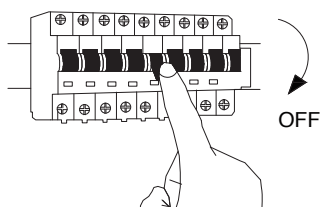


Turn off the general switch

2

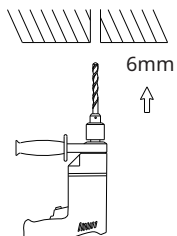


Drill holes

3

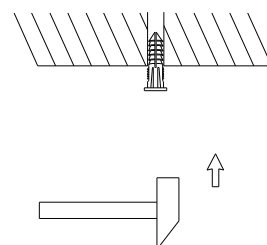


Apply plastic anchors

4

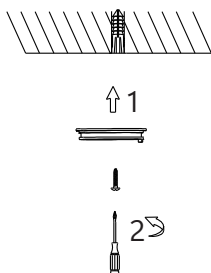


Apply the elemnt with screw

5

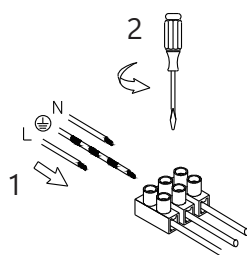

Apply the elements in place

6

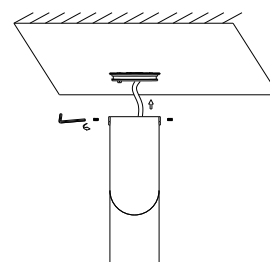

Apply the element in place

