


# NOVA LUCE


9060256

1

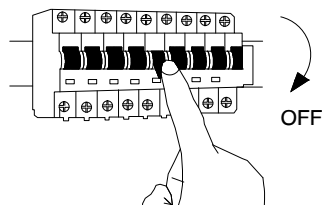


Turn off the general switch

2

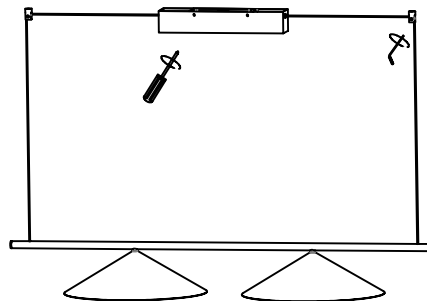


Untie the cap & apply side screws

3

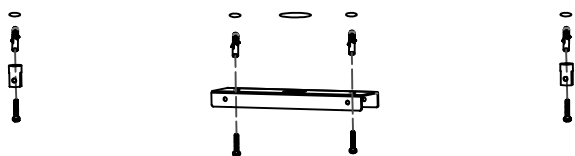


Align, mark & drill holes

4

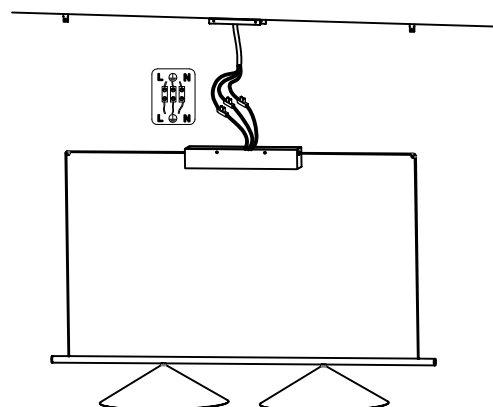


Connect wires

5

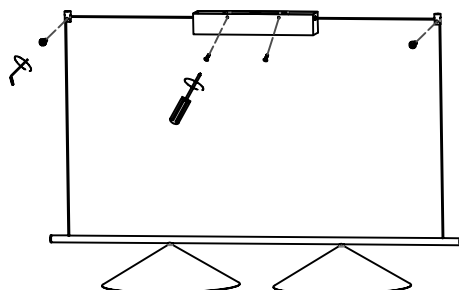

Apply screws to make it stable

6

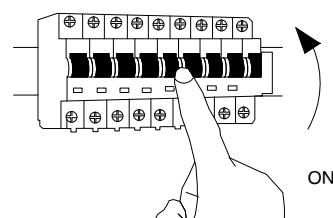

Turn on the general switch

