


# NOVA LUCE


9186813

1

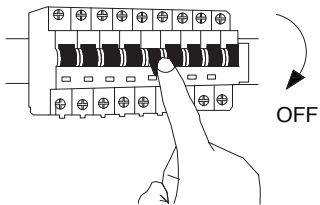


Turn off the general switch

2

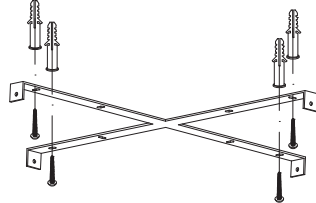


Align, mark, drill holes  
& Apply the screws

3

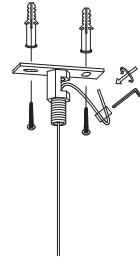


Apply the screws

4

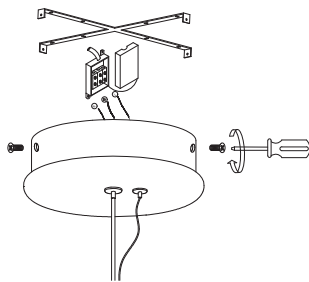


Apply the side screws  
& Connect the 3 wires

5

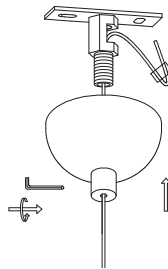

screw the canopy

5

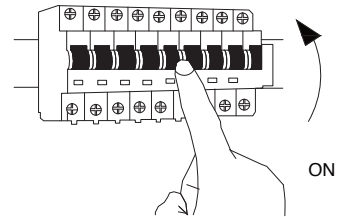

Turn on the general switch

