


NOVA LUCE


9031785 9031786

1

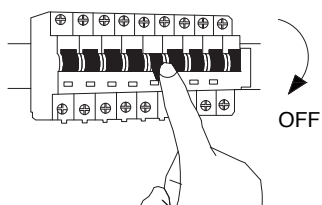


Turn off the general switch

2

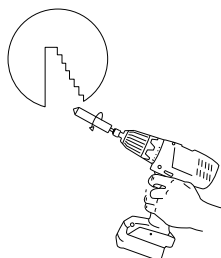


Make a cut out 3.5 cm

3

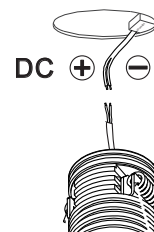


Connect the wires
The cable connection has to be waterproof
Below tow ways recommended. Accessories

4

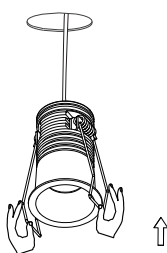

Apply the product in to place

5

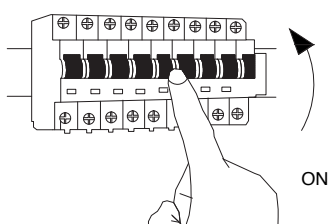

Turn on the general switch

