


NOVA LUCE


9232248, 9232249

1

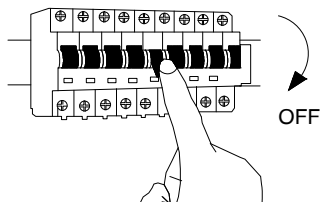


Turn off the general switch

2

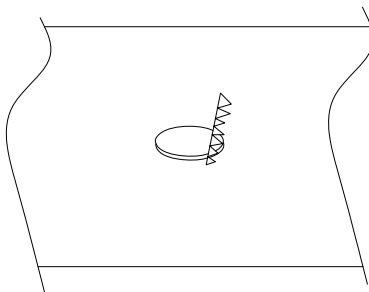


Create a 9.5 cm CutOut

3

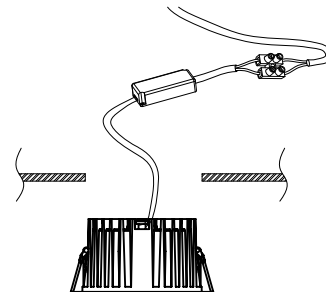


Connect the wires

4

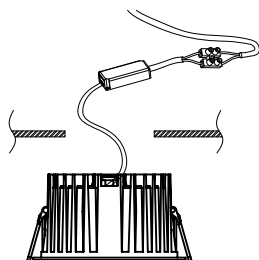

Place the luminaire into the hole

5

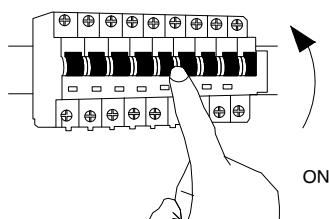

Turn on the general switch

