


# NOVA LUCE


9210312

1

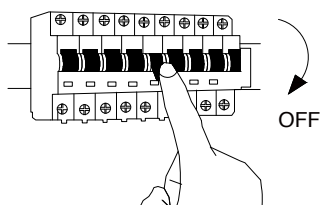


Turn off the general switch

2

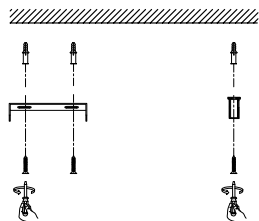


Drill holes, Apply plastic anchors & Screws

3

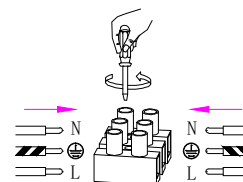


Connect the wires

4

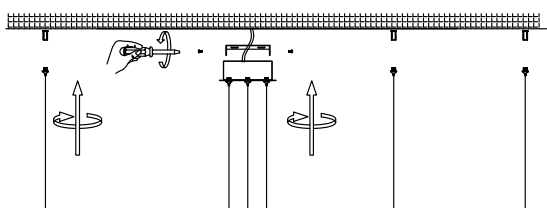

Apply the side screws with the canopy by rotating

5

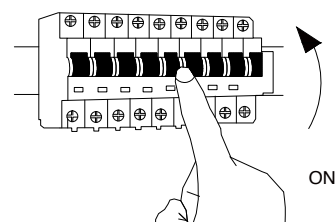

Turn on the general switch

