


NOVA LUCE

9040122-9040123-9040124


①

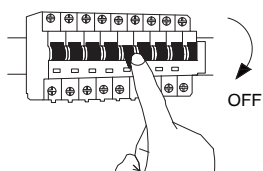

Turn off the general switch


②

Code No.	Cut Size.
9040116-9040117	72*31mm
9040118-9040119	108*31mm
9040120-9040121	198*31mm

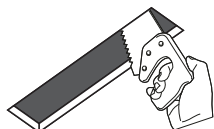


Create a CutOut

③

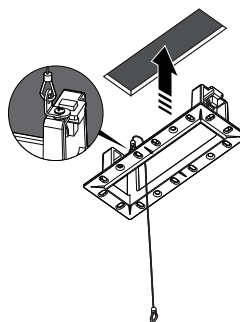


Connect the assisting rope

④

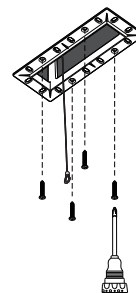


Press brackets together & insert it into the hole

⑤

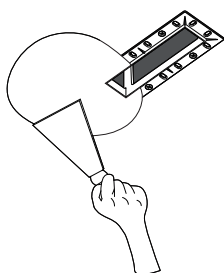


Apply a sealer

⑥

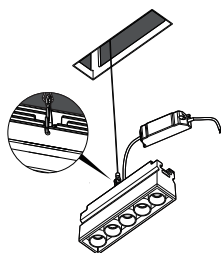


Connect the driver

⑦

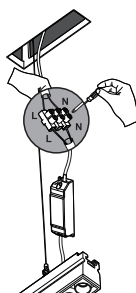


Connect wires

⑧

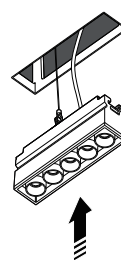

Fix it into place

⑨

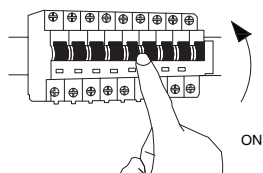

Turn on the general switch

⑩

