


# NOVA LUCE


9289084

1

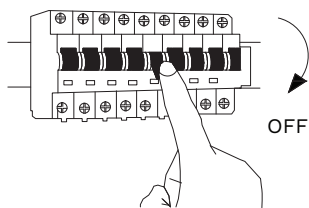


Turn off the general switch

2

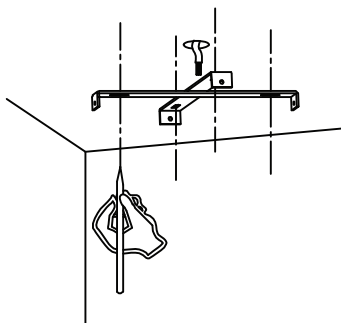


Mark the desirable position of installation

3

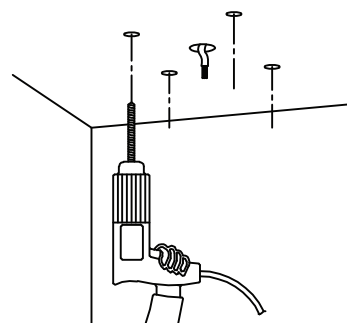


Drill holes

4

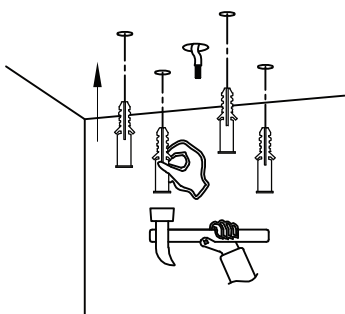


Apply plastic achors

5

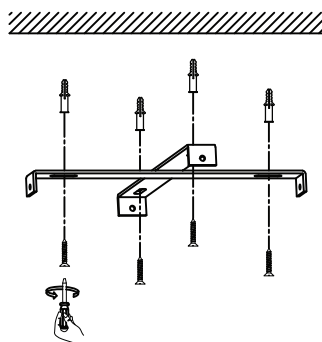


Tie up screws to make it stable

6

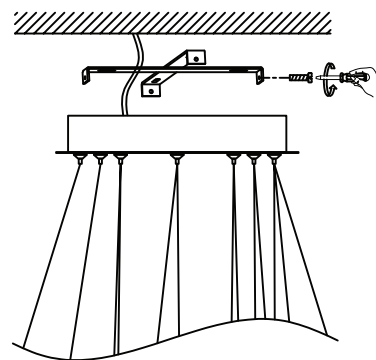


Connect wires

7

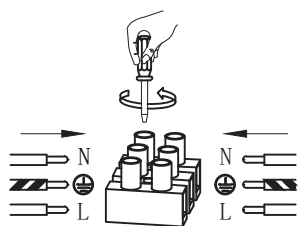

Connect wires

8

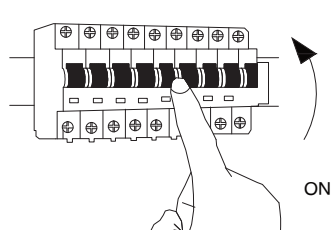

Turn on the general switch

