



# NOVA LUCE


9050703 9050704

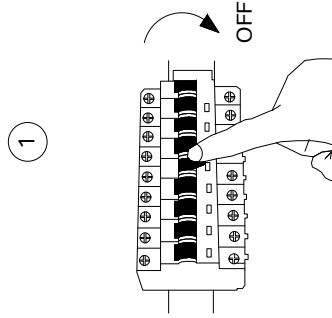


Turn off the general switch

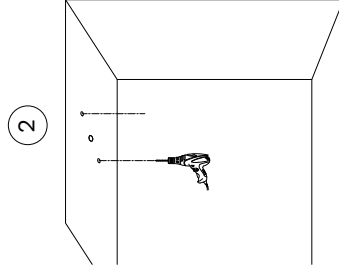


Drill holes

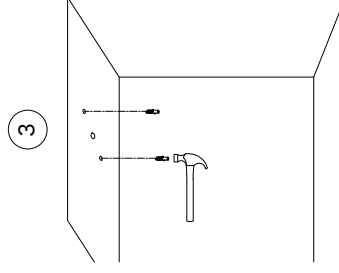


Apply plastic anchors

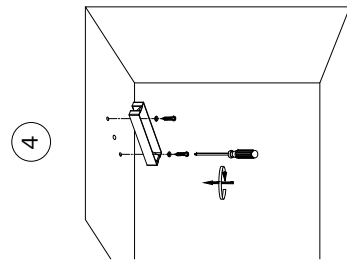


Apply the screws

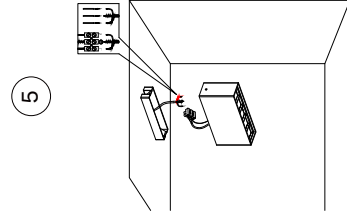

Connect the wires

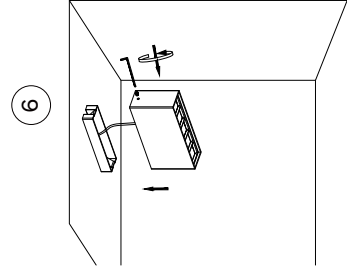

Apply the side screws

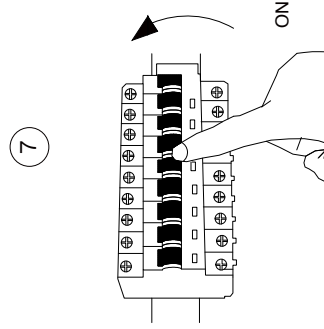

Turn on the general switch

