


# NOVA LUCE


9215803 9215804  
9215805

1

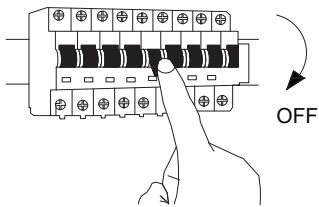


Turn off the general switch

2

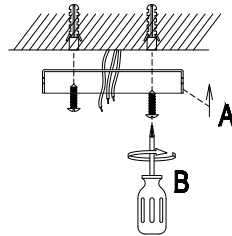


Drill holes & apply plastic anchors  
With screws

3

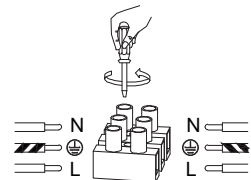


Connect the wires

4

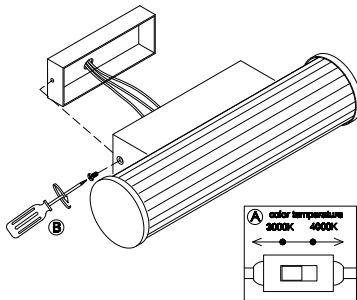

Apply the side screws

5

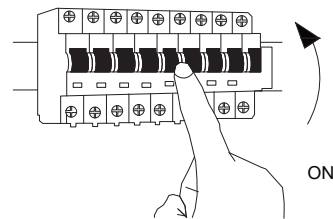

Turn on the general switch

