



NOVA LUCE


9695340

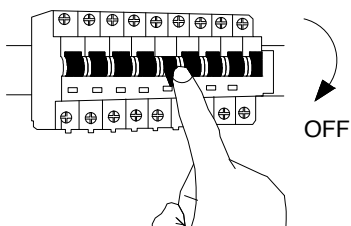


1. Turn off the general Switch

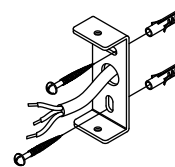

2. Align, mark and drill holes to apply the screws

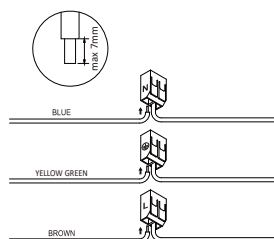


3. Connect the 3 wires

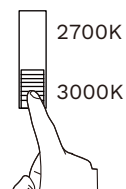


ATTENTION!
Turn off the light
before changing the
color temperature

4. changing the color temperature

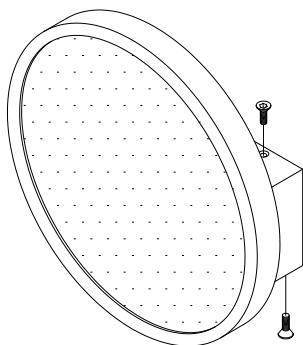

5. Apply the side screws

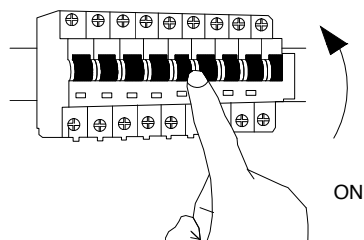

6. Turn on the general Switch

