


# NOVA LUCE


9060305 9060306  
9060307 9060308

1

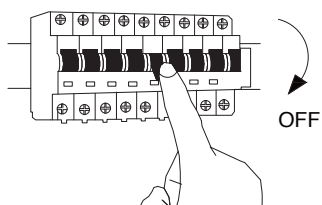


Turn off the general switch

2

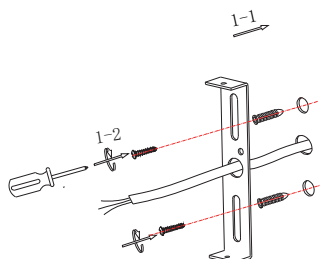


Drill holes, apply plastic anchors  
With screws

3

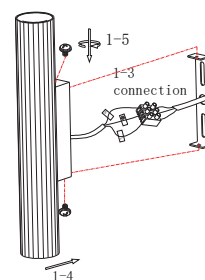

Connect the wires & apply  
side screws

4

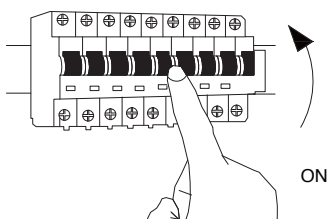

Turn on the general switch

