



NOVA LUCE

A
9030131 9030132




1

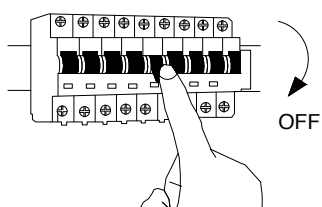


Turn off the general switch

2

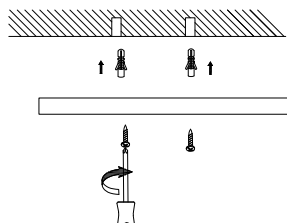


Drill holes & apply plastic anchors
With screws

3

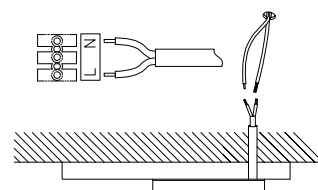


Connect the wires

4

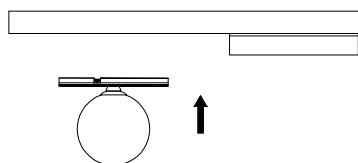


Apply the side screws

5

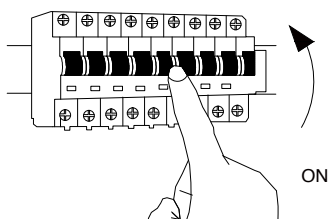


Turn on the general switch

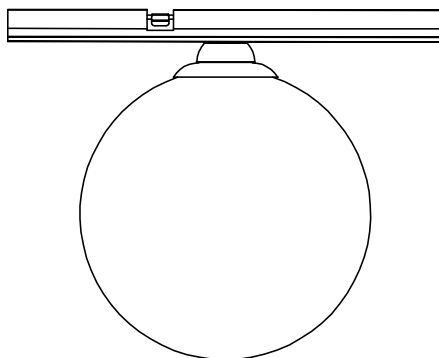


NOVA LUCE

B
9030131 9030132




1

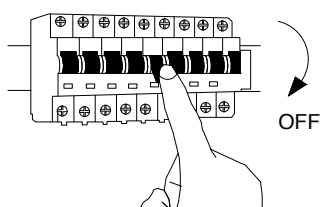


Turn off the general switch

2

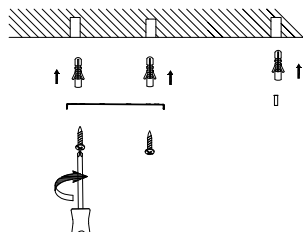


Drill holes & apply plastic anchors
With screws

3

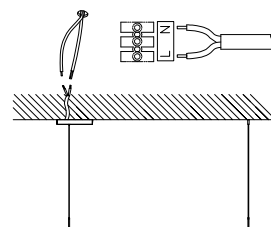


Connect the wires

4

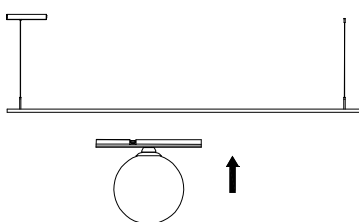


Put it in place

5

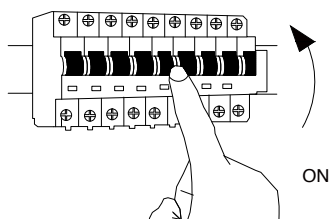


Turn on the general switch

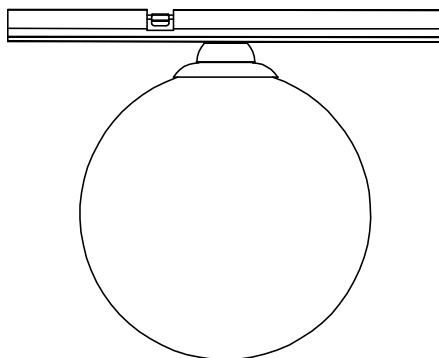


NOVA LUCE

C
9030131 9030132




1

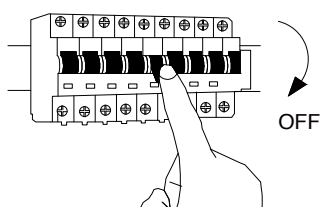


Turn off the general switch

2

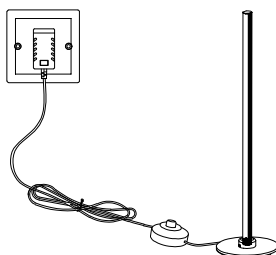


Plug it in

3

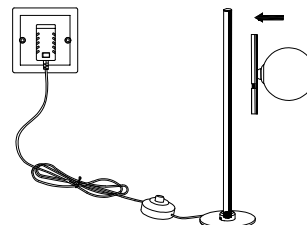

Put it in place

4

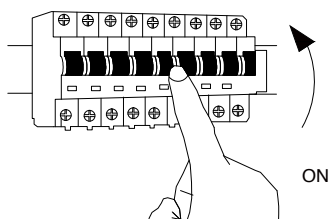

Turn on the general switch

