


# NOVA LUCE


820602, 820603

1

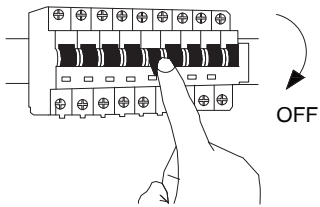


Turn off the general switch

2

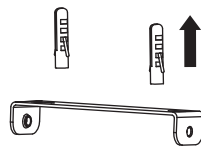


Mark, drill & make holes  
Apply plastic anchors

3

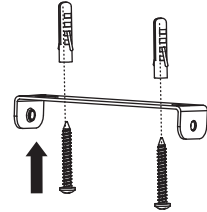


Tie up screws

4

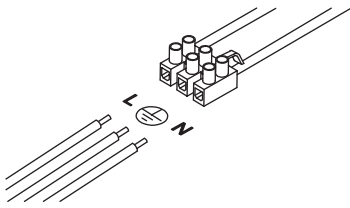


Connect the wires

5

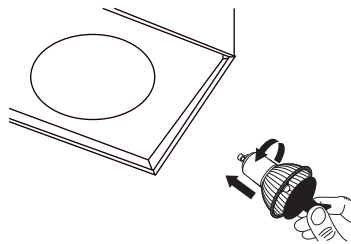


Insert bulb by rotate

6

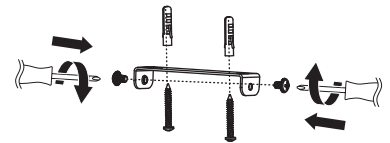

Apply side screws to make it stable

7

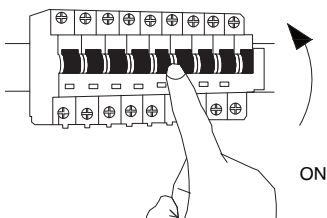

Turn on the general switch

