


NOVA LUCE


9190213

1

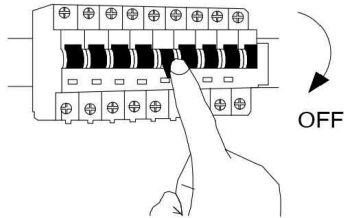


Turn off the general switch

2

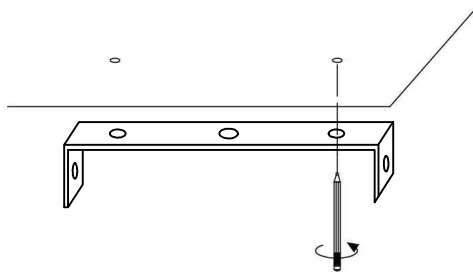


Mark where to drill holes

3

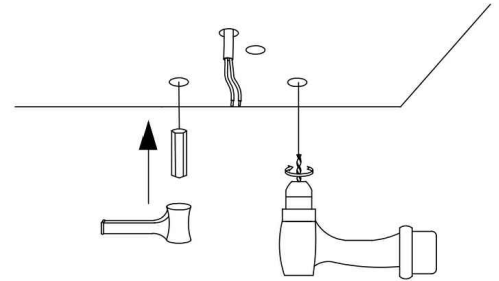


Make holes & apply anchors

4

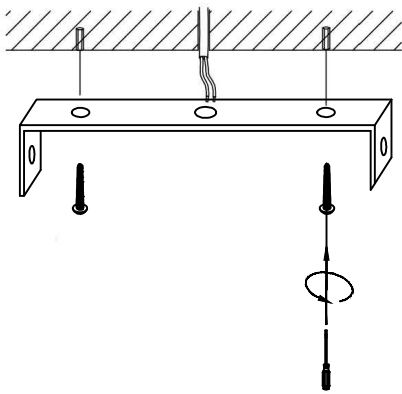


Tie up the screws to make it stable

5

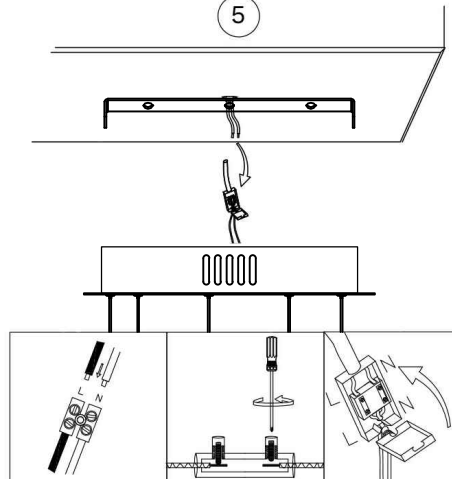

Connect the wires

6

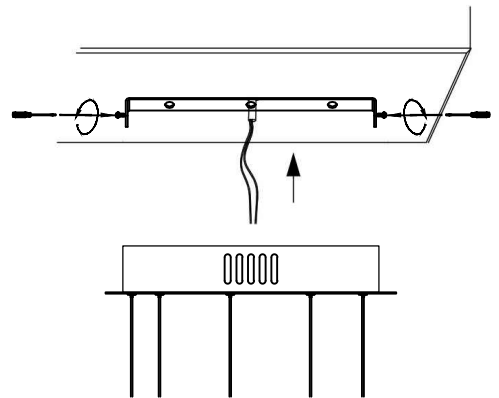


Put the canopy in place & Apply screws

7



Put the glass cover on the aluminum parts

8

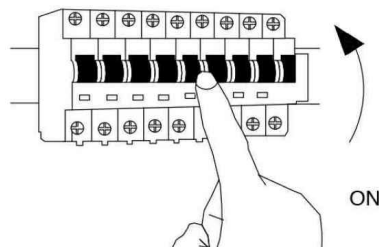

Turn on the general switch

9

