

NOVA LUCE


9210314

1




Turn off the general switch

2

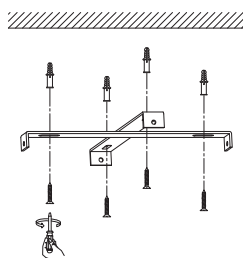


Drill holes apply screws
& Plastic anchors

3

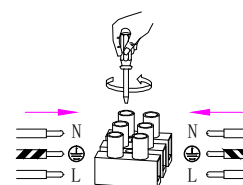

Connect the wires

4

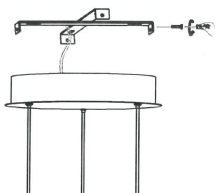


Apply the side screws

5



Apply the canopy by rotating

6

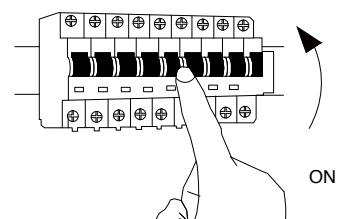

Turn on the general switch

