



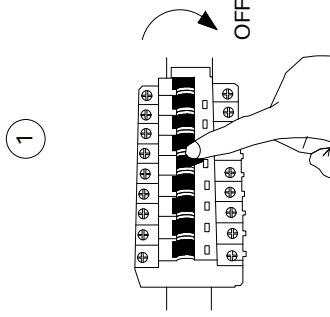

1


Turn off the general switch

2

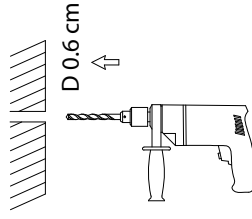


Drill holes with D: 0.6 cm

3

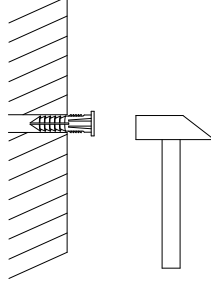


Apply plastic anchors

4

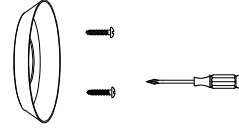


Apply screws
With a screwdriver

5

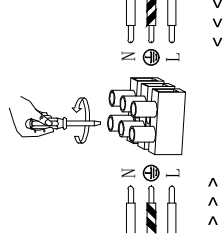


Connect the wires

6

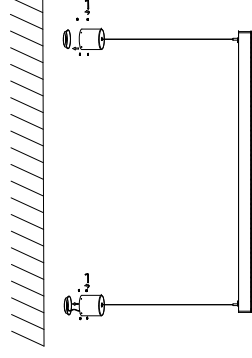

Apply the side screws

7

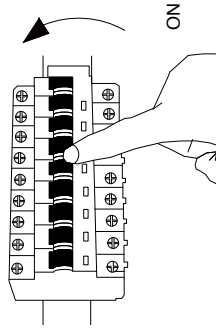

Turn on the general switch

