



# NOVA LUCE


9844077

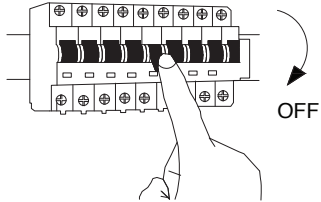


1. Turn off the general switch

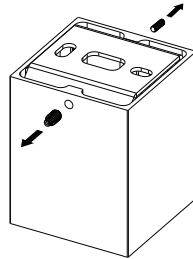


2. By rotating untight the side screws

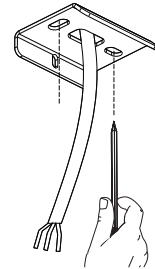


3. Mark where to drill

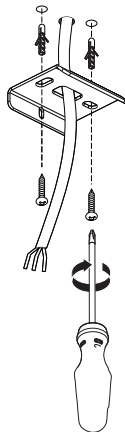


4. Drill, apply plastic anchors & screws

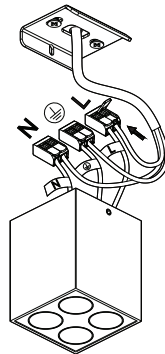


5. Connect the wires

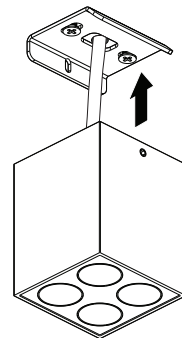

6. Fix it in place

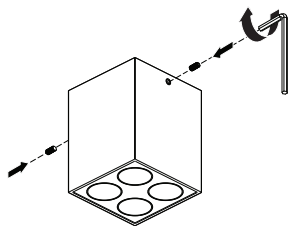

7. Apply the side screws to put it in place

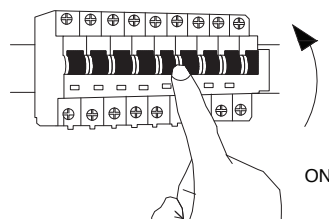

8. Turn on the general switch

