


NOVA LUCE


710022

1

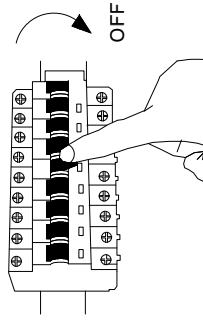


Turn off the general switch

2

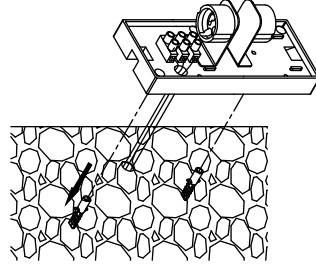


Mark, drill holes
& apply plastic anchors

3

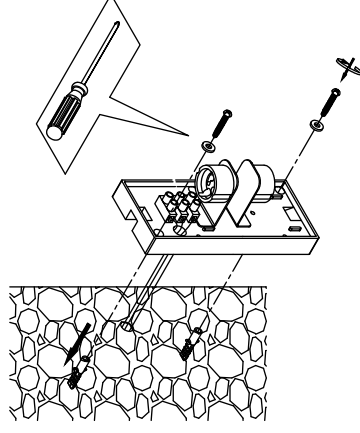


Tie up the screws into place

4

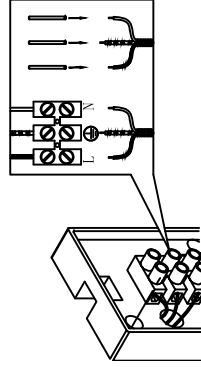


Connect wires

5




Apply the bulbs by rotating

7

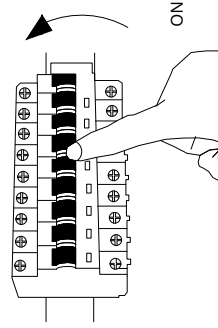

Turn on the general switch

6

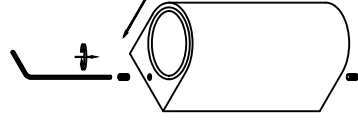

Apply the cap
by tying up the side screws

8

