


NOVA LUCE

667003

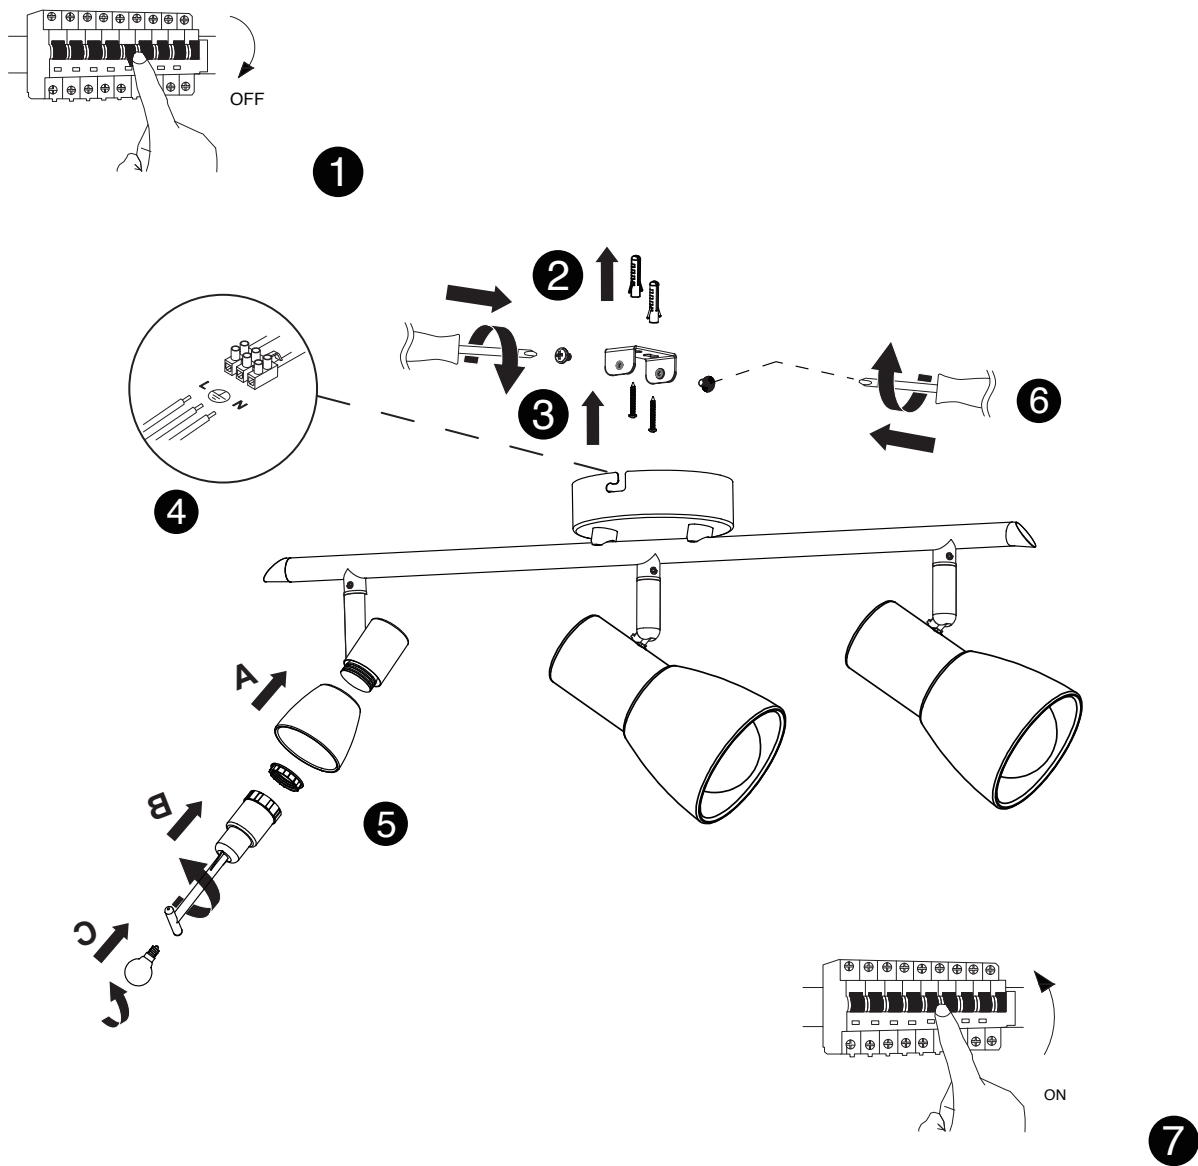

1. Turn off the general switch
2. Drill holes and apply plastic anchors
3. Apply screws

4. Connect the wires
5. Place the bulb & the product in to place
6. Apply the side screws
7. Turn on the general switch