


# NOVA LUCE


9040104-9040105  
9040109-9040110

1

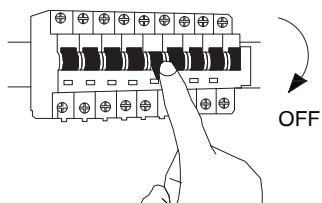

Turn off the general switch


2

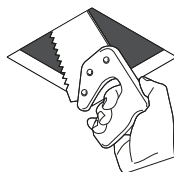

Code No.	Cut Size.
9040109-9040110	60*60mm


Create a CutOut

3

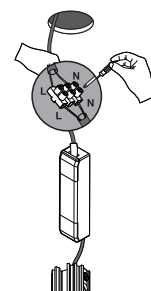


Connect wires

4

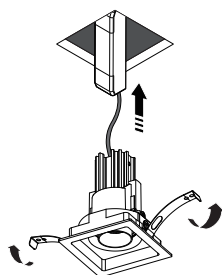

Press brackets & Insert it into the hole

5

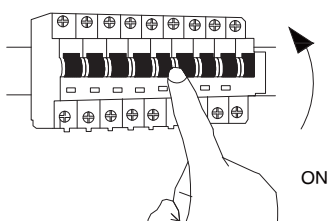

Turn on the general switch

6

