


NOVA LUCE


9232238
9232239
9232240
9232241

1

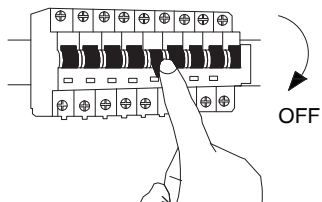


Turn off the general switch

2

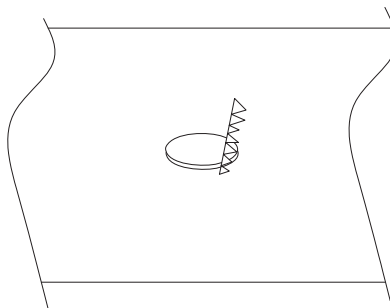


Create a 5.5 cm CutOut

3

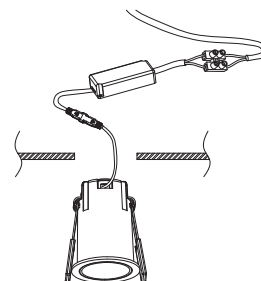


Connect the driver to the power

4

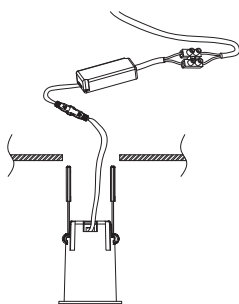

Place the luminaire into the hole

5

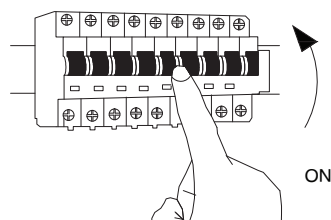

Turn on the general switch

