


NOVA LUCE


9570153

①

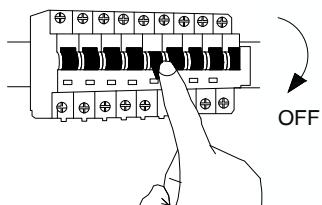


Turn off the general switch

②

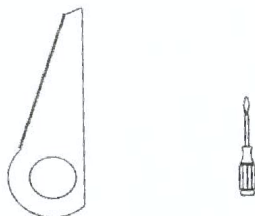


Create holes 0.6 cm

③

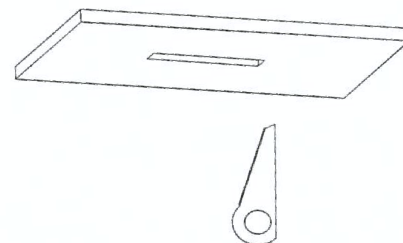


Create a CutOut Ø3.5 cm

④

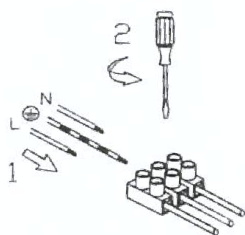


Connect wires

⑤

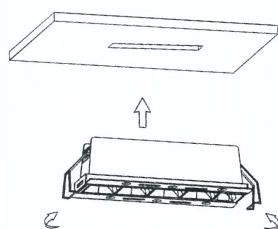


Press the brackets together
& fix the luminaire into place

⑥

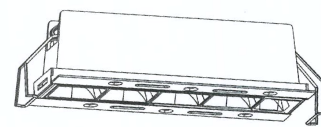


Make sure it is place
on the right place

⑦

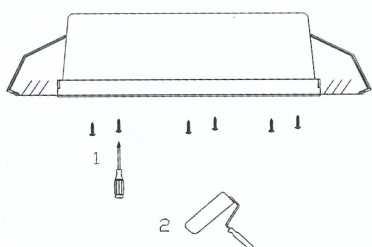

Tie up screws to make it stable
& complete the instalation

⑧

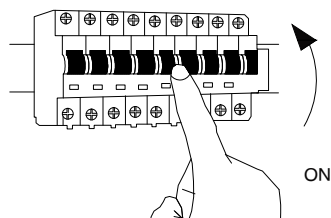

Turn on the general switch

