


NOVA LUCE


711008

1

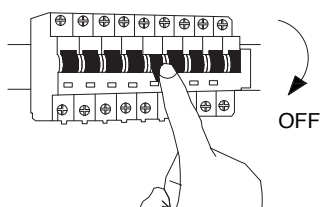


Turn off the general switch

2

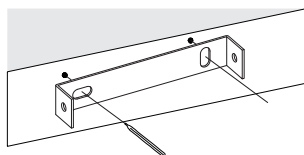


Mark where to drill

3

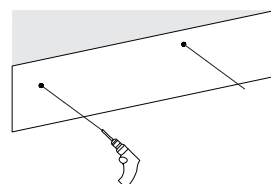


Drill holes

4

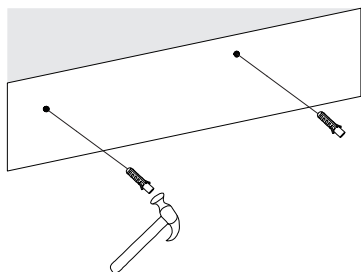


Apply plastic anchors

5

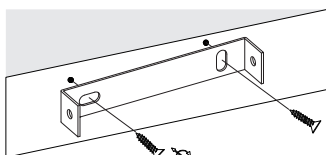


Apply screws

6

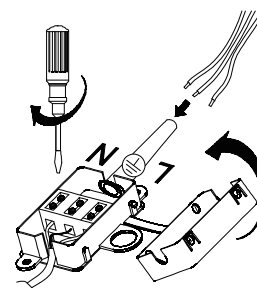


Connect wires

7

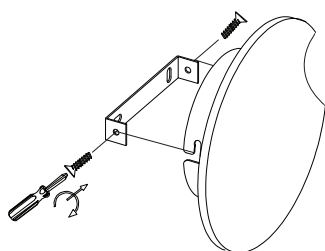

Apply side screws

8

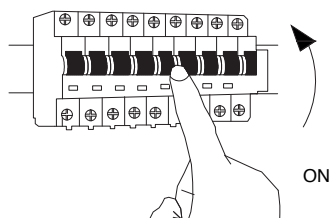

Turn on the general switch

