



# NOVA LUCE


9186716  
Part 1

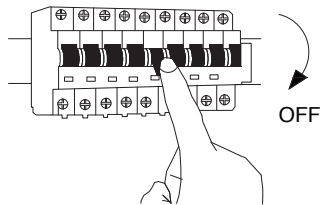


1. Turn off the general switch

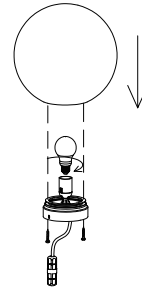


2. By rotating, break it apart

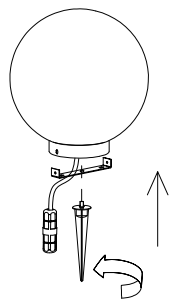


3. Align, mark and drill holes  
To apply the screws

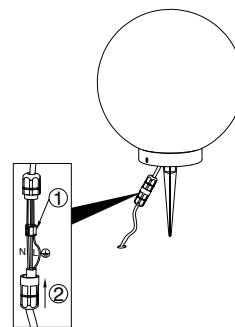


4. Connect the wires

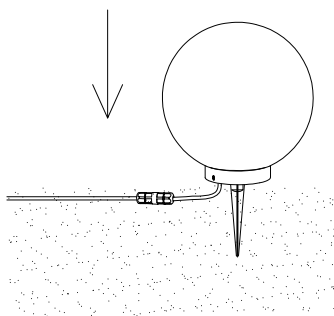


5. Apply the Side screws

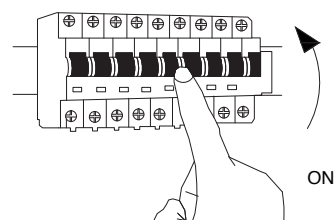


7. Turn on the general switch

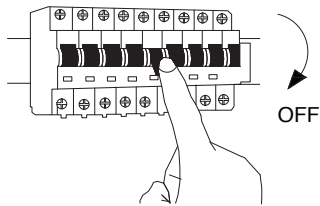


1. Turn off the general switch

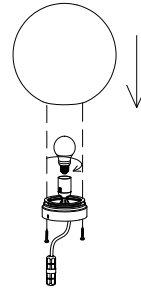


2. By rotating, break it apart

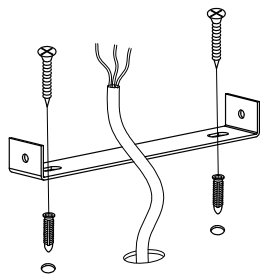

3. Align, mark and drill holes  
To apply the screws

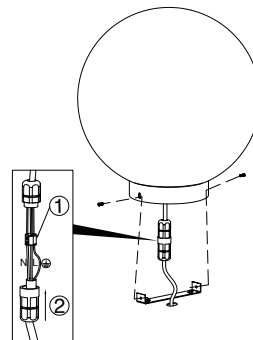

4. Connect the wires

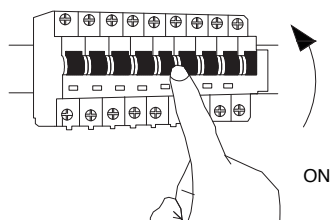

7. Turn on the general switch