


# NOVA LUCE


9232230  
9232231  
9232232  
9232233

1

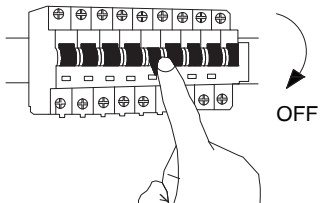


Turn off the general switch

2

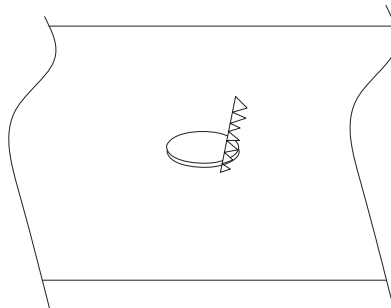


Create a 3.5 cm CutOut

3

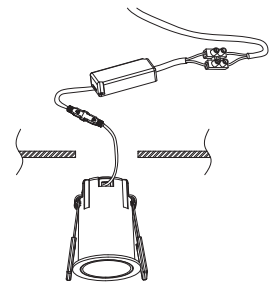


Connect the driver to the power

4

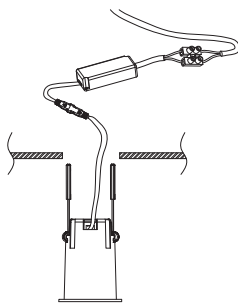

Place the luminaire into the hole

5

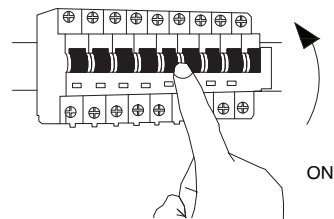

Turn on the general switch

