

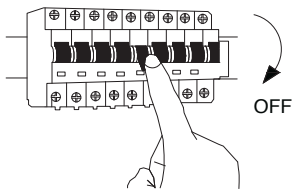


# NOVA LUCE

9624099

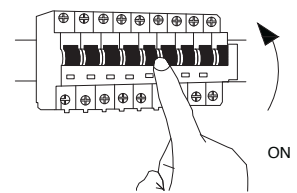

1

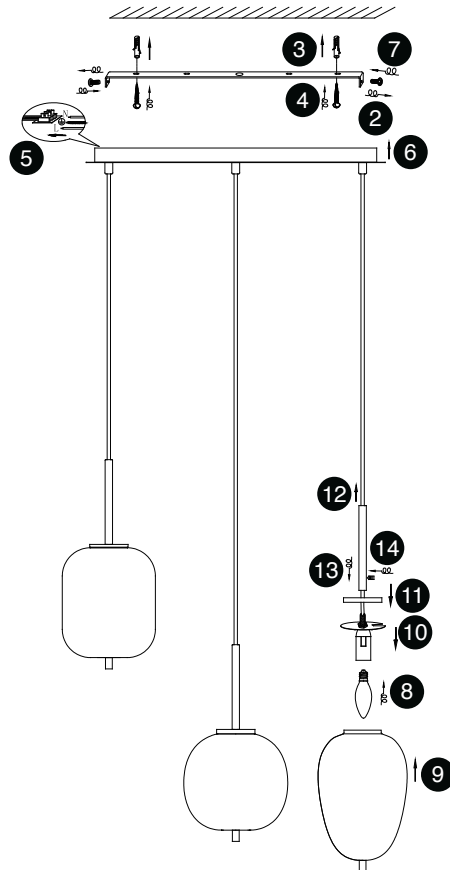

15

1. Turn off the general switch
2. Untight the side screws
3. Drill holes, apply plastic anchors
4. Apply screws
5. Connect wires
6. Fix the canopy into place
7. Apply the side screws
8. By rotating apply the bulb
9. Apply the glass
10. 11. 12. 13. Assemble & adjust parts
14. Apply the side screw to make it stable
15. Turn on general switch

