


# NOVA LUCE


9010033

1

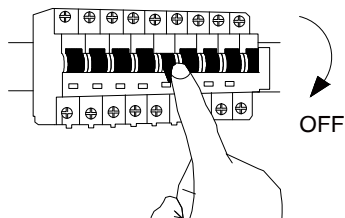


Turn off the general switch

2

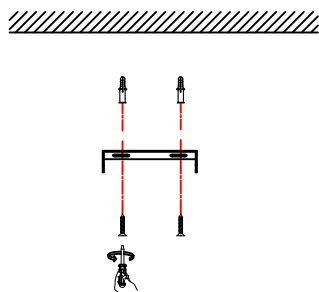


Mark & drill holes  
Apply plastic anchors & tie up screws

3

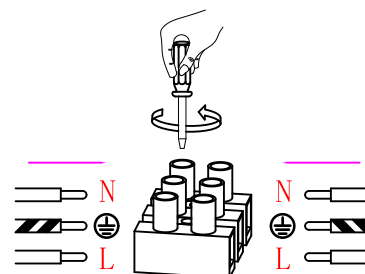


Connect wires

4

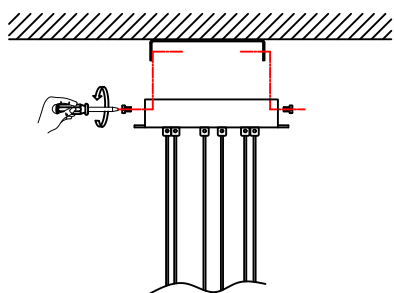

Fix it in place by tying up side screws

5

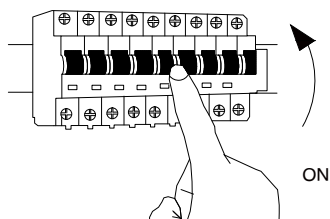

Turn on the general switch

