


NOVA LUCE


9053201, 9053202

1

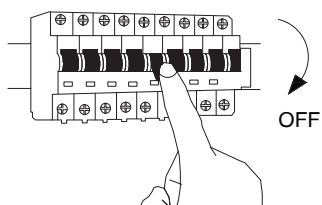


Turn off the general switch

2

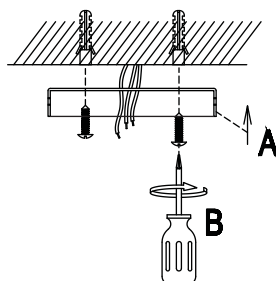


Drill holes, apply plastic anchors
& apply screws with a screw driver

3

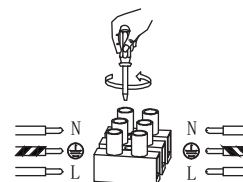


Connect the wires

4

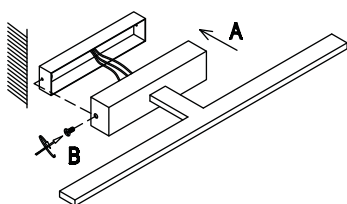

Fix it in place
and apply the side screws
to make it stable

5

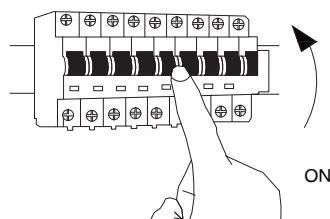

Turn on the general switch

