


# NOVA LUCE

9960615

1

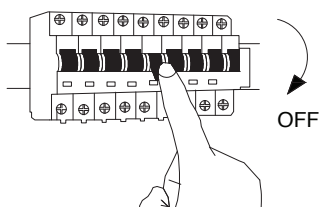


Turn off the general switch

2




Align, mark and drill holes  
to apply the screws

3

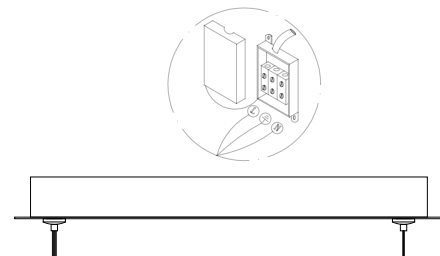


Connect the wires

4

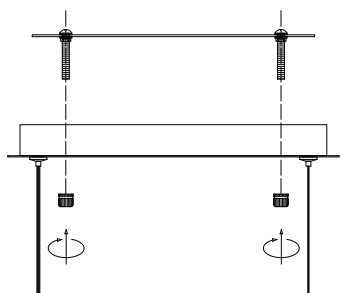


Apply the cap nuts

5

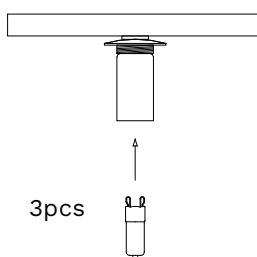


Insert the bulb

6

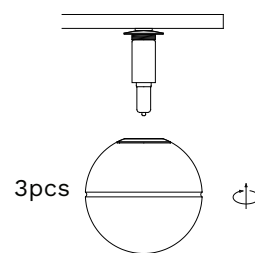

Apply the glass by rotating

7

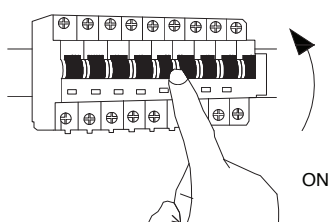

Turn on the general switch

