

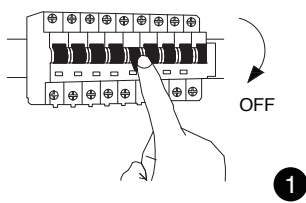


NOVA LUCE

6311802

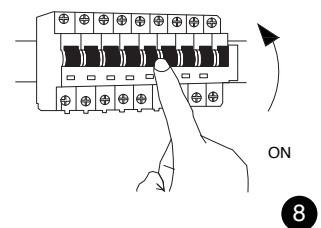

1

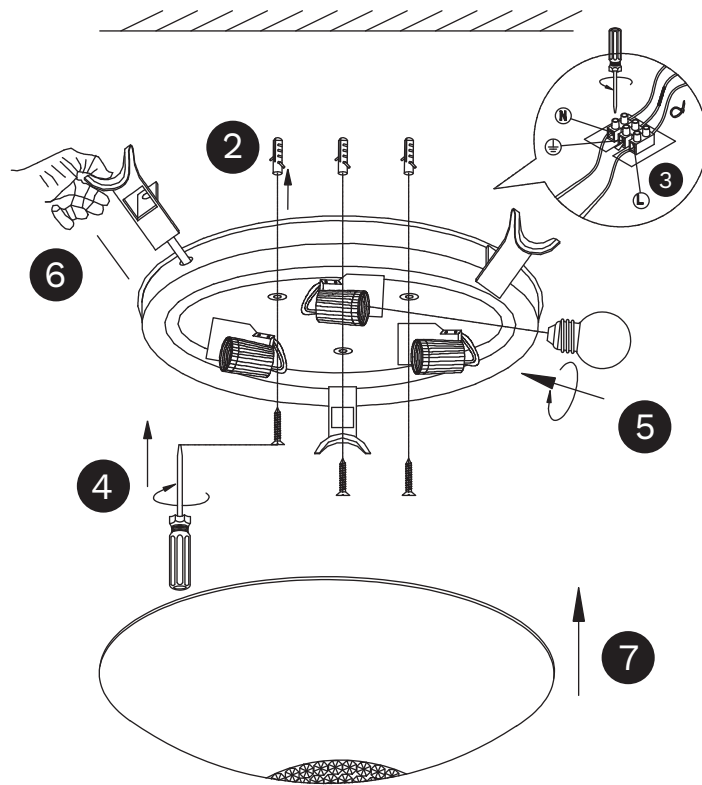

8

1. Turn off the general switch
2. Drill holes, apply plastic anchors
3. Connect wires
4. Apply screws
5. Apply the bulbs
6. Fix it in place
7. Fix the canopy into place
8. Turn on general switch

