


NOVA LUCE


9010008/ 9010009

1

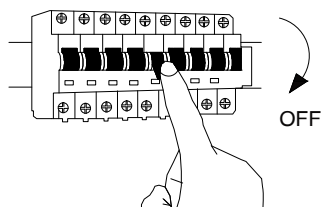


Turn off the general switch

2

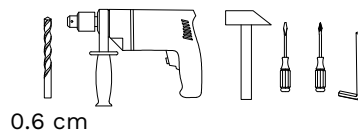


Mark where to drill holes

3

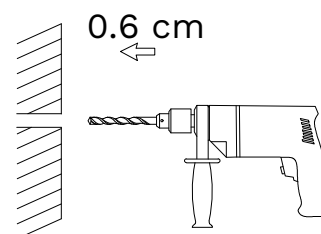


Drill holes on the marked areas

4

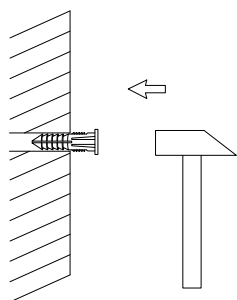


Fix plastic anchors into place

5

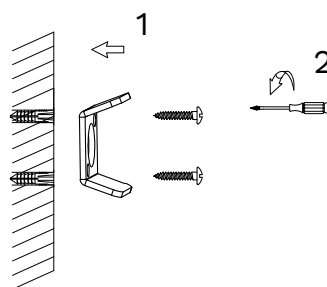


Tie up screws to apply the base

6

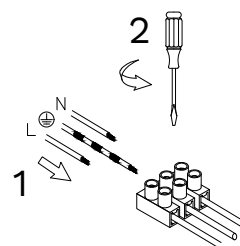


Connect wires

7

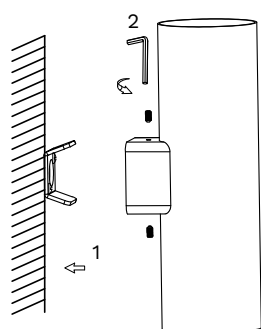

Tie up side screws to make it stable

8

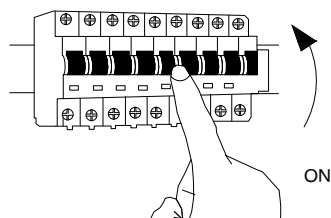

Turn on the general switch

