


NOVA LUCE


9113777/ 9113778

1

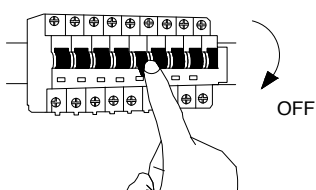


Turn off the general switch

2

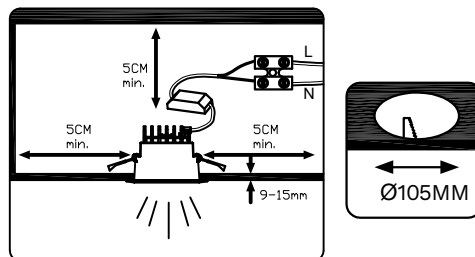

Create a CutOut

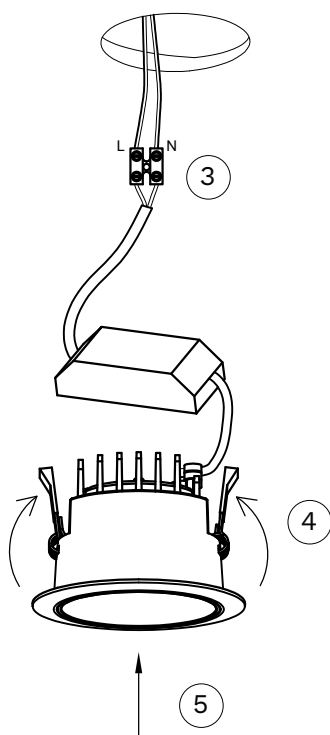


3. Connect wires

4. Press brackets together to insert the luminaire into the hole

5. Fix luminaire into place

6

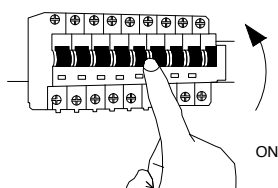

Turn on the general Switch

