


# NOVA LUCE


9191544

1

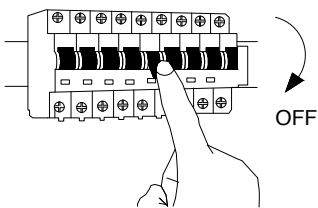

Turn off the general switch

2

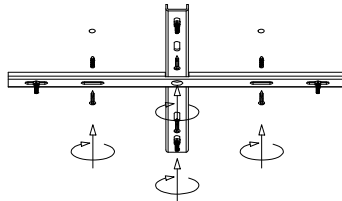


Drill holes & apply plastic anchors  
With screws

3




Connect the wires

4

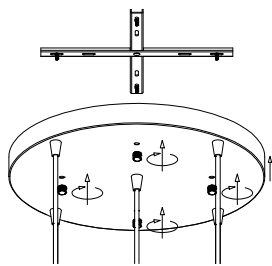


Apply the side screws

5

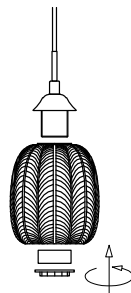


Apply the cap by rotating

6

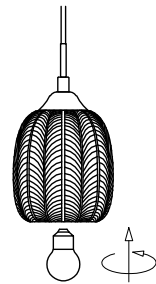

By rotating apply the bulb

7

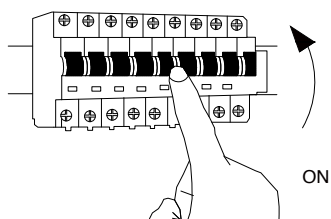

Turn on the general switch

