


NOVA LUCE


9232243

1

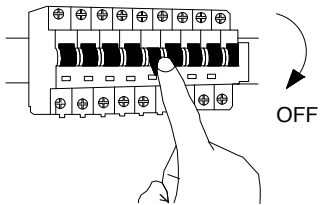


Turn off the general switch

2

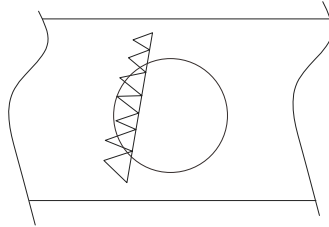


Create a 3.5 cm CutOut

3

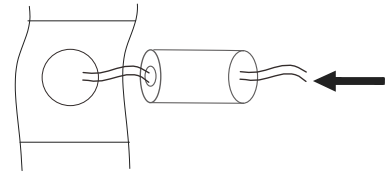


Connect the wires

4

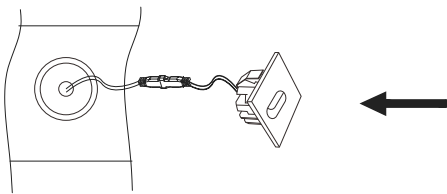

Place the luminaire into the hole

5

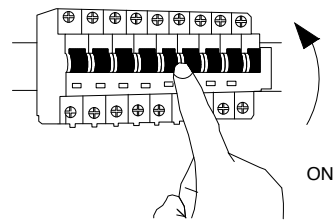

Turn on the general switch

