



# NOVA LUCE


9200202

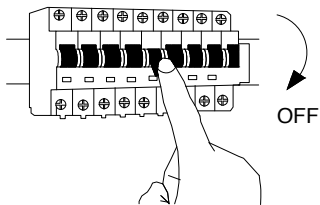


1. Turn off the general switch

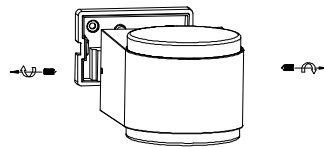


2. Untight the side screws

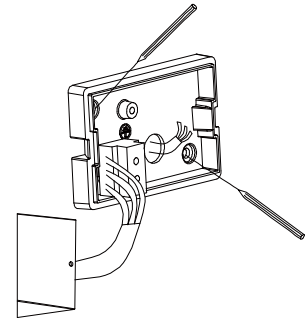


3. Mark the area

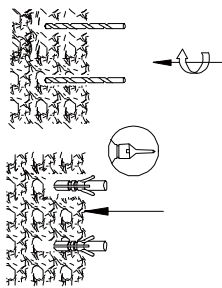


4. Drill on the marked areas & Apply plastic anchors

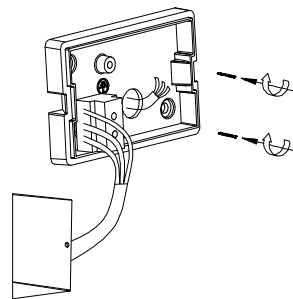


5. Apply the screws

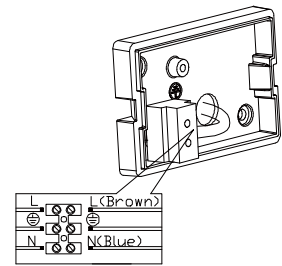

6. Connect the wires

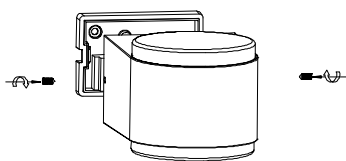

7. Tight the side screws

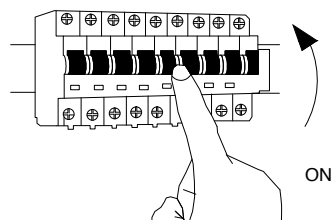

8. Turn on the general switch

