


# NOVA LUCE

9030834

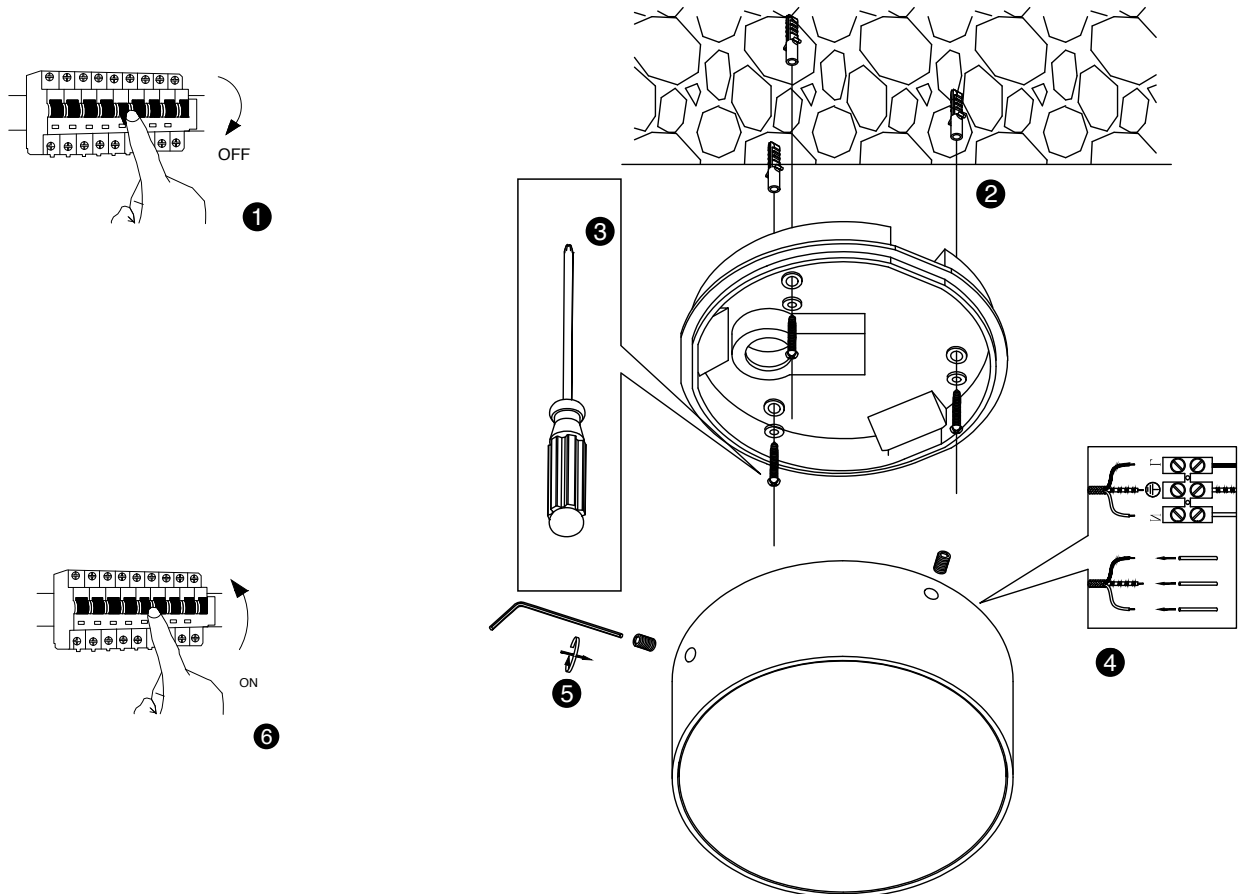

1. Turn off the general switch
2. Drill holes & apply plastic anchors
3. Apply screws with a screw driver
4. Connect the wires
5. Fix it in place & apply the side screws
6. Turn on the general switch