


NOVA LUCE


9006041

1

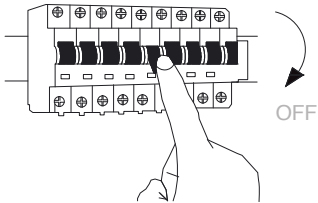


Turn off the general switch

2

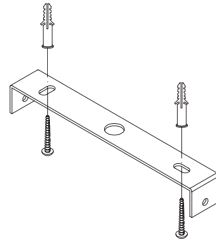


Align, mark and drill holes to apply the screws

3

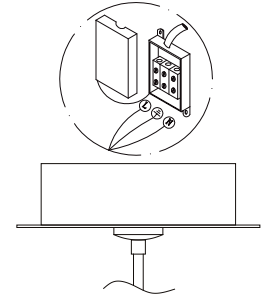


Connect the wires

4

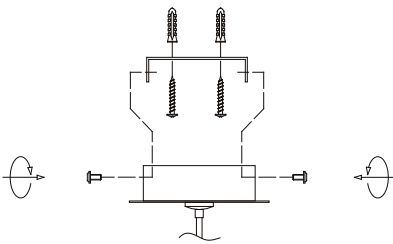


Apply the side screws

5




Insert the bulb

6

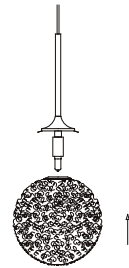

Apply the glass

7

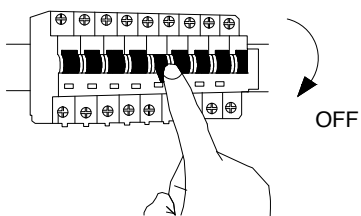

Turn on the general switch

