


# NOVA LUCE


9540213

1

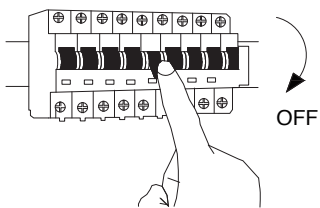


Turn off the general switch

2

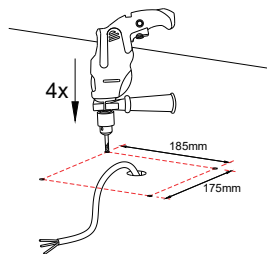


Drill holes & apply plastic anchors  
With screws

3

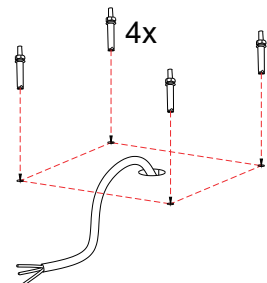


Apply anchors

4

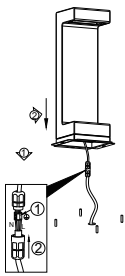


Connect the wires

5

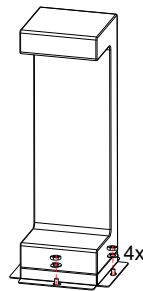

Apply the nuts

6

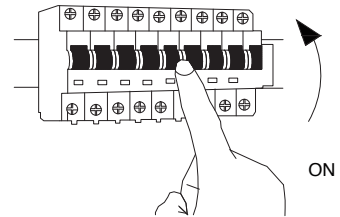

Turn on the general switch

