


# NOVA LUCE


9111504 9111505 9111506

1

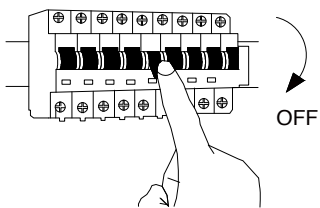


Turn off the general switch

2

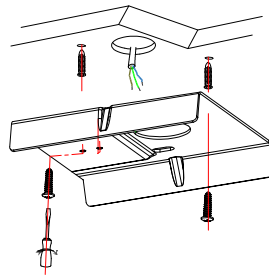


Drill holes & apply plastic anchors  
With screws

3

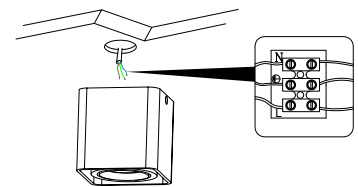


Connect the wires

4

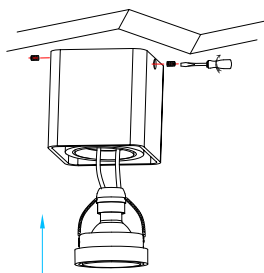


Apply the bulb

5

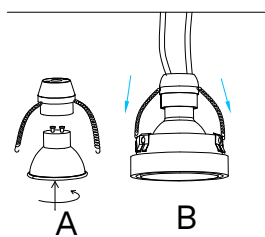

Apply the product in to place

6

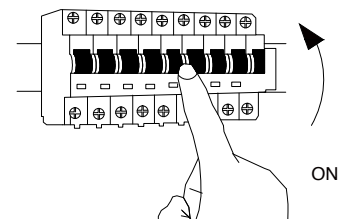

Turn on the general switch

